




zūmo[®] 200 series quick start manual

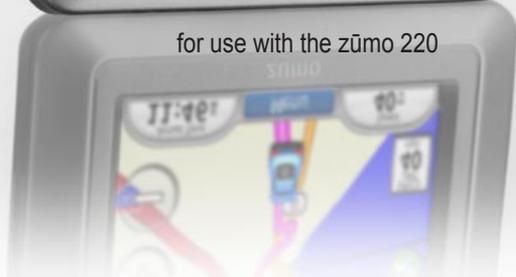


for use with the zūmo 220



Your zūmo


 **Power button:**
Press and hold to turn on/off the zūmo.
Press quickly to adjust the backlight
brightness.

GPS antenna

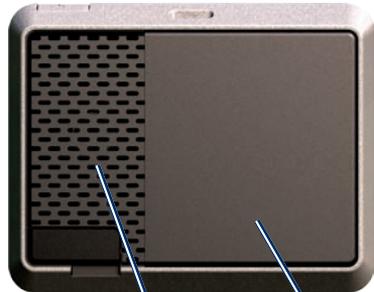

Speaker

Battery cover

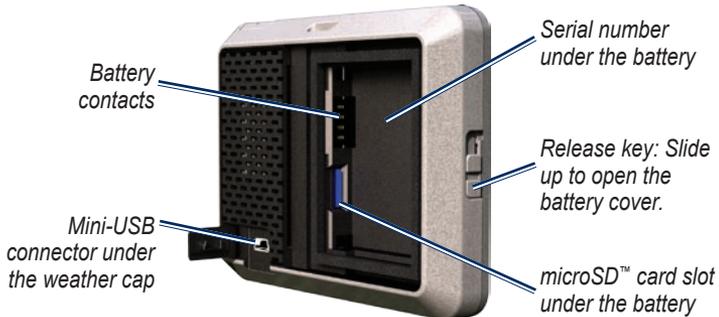

Important Information

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

Before mounting the zūmo, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

Getting Started

Installing the Battery

1. Locate the lithium-ion battery that came in the product box.
2. Slide the release key up to open the battery cover on the back of the zūmo.
3. Locate the metal contacts on the end of the lithium-ion battery.
4. Insert the battery so that the metal contacts on the battery match up with the metal contacts inside the battery compartment.



5. Press the battery into place.
6. Slide the battery cover back on until it clicks into place.

Connecting Power to the zūmo

1. Pull back the weather cap from the mini-USB connector located on the back of your zūmo.
2. Plug the vehicle power cable into the mini-USB connector.


Charging Your zūmo

Charge your zūmo for at least 4 hours before using on battery power.

- Use the automotive power cable.
- Use the USB cable.
- Use an optional AC adapter cable.
- Use an optional battery charger.

Mount Your zūmo in an Automobile

1. Pull back the weather cap from the mini-USB connector located on the back of your zūmo.

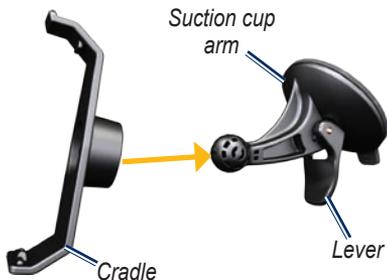

2. Plug the vehicle power cable into the mini-USB connector.
3. Snap the cradle onto the suction cup arm.
4. Remove the clear plastic from the suction cup. Clean and dry your windshield and the suction cup with a lint-free cloth.
5. Place the suction cup on the windshield.



6. Flip the lever back, toward the windshield.
7. Fit the bottom of your zūmo into the cradle.
8. Tilt the zūmo back until it snaps into place.
9. Plug the other end of the vehicle power cable into a power outlet in your vehicle. Your zūmo should turn on automatically if it is plugged in and the vehicle is running.

Mount Your zūmo on the Motorcycle

WARNING

Incorrectly wiring the power cable with bare wire leads can result in damage to the vehicle or the battery and can cause bodily injury. Garmin strongly recommends having an experienced installer with the proper knowledge of electrical systems install the unit.

NOTICE

To avoid draining the motorcycle battery, disconnect the power cable from your zūmo device when you are not riding.

NOTE: Select a suitable and secure location to mount the zūmo on your motorcycle, based on available power sources and safe cable routing.


Install the Handlebar Base

The zūmo includes parts for two handlebar installation solutions. Custom mounts can require additional hardware (www.ram-mount.com).

Installing the U-bolt and handlebar base:

1. Place the U-bolt around the handlebar, and thread the ends through the handlebar base.
2. Tighten the nuts to secure the base. Do not overtighten.


NOTE: The recommended torque is 50 lbf-in. Do not exceed torque of 80 lbf-in.

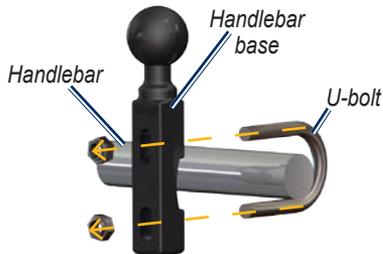


Installing the handlebar base to the clutch/brake clamp bracket:

NOTE: Both 1/4 in. standard and M6 bolts are included. Match the size of the factory bolts on your clutch/brake clamp bracket.

1. Remove the two factory bolts on your clutch/brake clamp bracket.
2. Thread the new bolts through the handlebar base, spacers, and clamp bracket.
3. Tighten the bolts to secure the base.

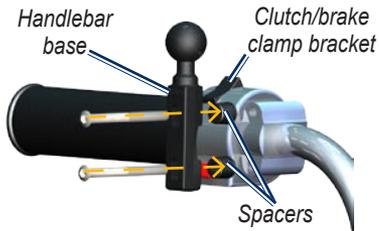

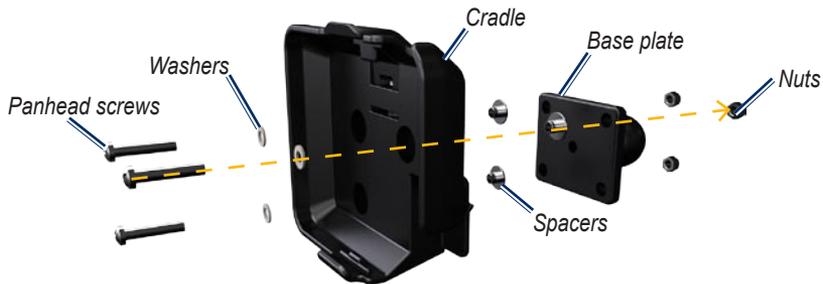


Attach the Base Plate to the zūmo Mount

1. Thread the M4 × 40 mm panhead screws through the washers, cradle, spacers, and base plate.
2. Tighten the nuts to secure the base plate.

Attach the Base Plate to the Handlebar Base

1. Align the ball of the handlebar base and the ball of the base plate with the double-socket arm.
2. Tighten the knob slightly.
3. Adjust for better viewing and operation.
4. Tighten the knob to secure the mount.

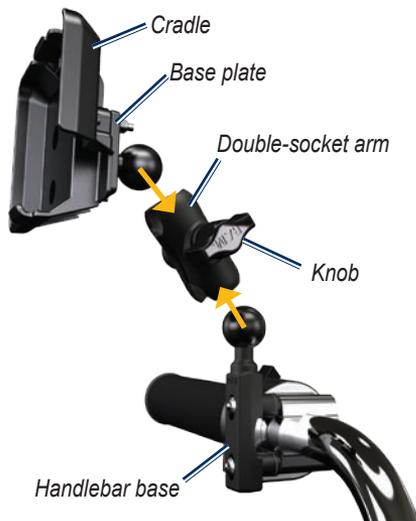

Install Your zūmo in the Mount

1. Fit the bottom of your zūmo into the cradle.
2. Tilt the zūmo back into the cradle.
3. Press down the release lever.



Remove Your zūmo from Either Mount

1. Press the release lever on the top of the mount to release the zūmo.
2. Lift out the zūmo.

Configuring the zūmo

To turn on your zūmo, press and hold . Follow the on-screen instructions.

Acquiring Satellites

Go outdoors to an open area, out of garages, and away from tall buildings. Stop your vehicle, and turn on the zūmo. Acquiring satellite signals may take a few minutes.

The  bars indicate satellite strength. When the bars are green, the zūmo has acquired satellite signals. Now you can select a destination and navigate to it.

Resetting the zūmo

If the zūmo stops functioning, turn the zūmo off and on again. If this does not help, press and hold  for 10 seconds. The zūmo should operate normally. You can also remove the battery, and then reinstall it.

Using the Menu Page



- 1 GPS satellite strength.
- 2 Bluetooth headset status.

NOTE: Pages appear differently based on your usage mode and settings.

- 3 Touch to change usage mode.
- 4 Battery status.
- 5 Current time. Touch to change time settings.
- 6 Touch to find a destination.
- 7 Touch to view the map.
- 8 Touch to adjust the volume.
- 9 Touch to use the tools such as settings, Where Am I?, Help, and routes.

Finding Points of Interest

1. Touch **Where To?** > **Points of Interest**.
2. Select a category.
3. Select a destination, and touch **Go!**.

To search by name, touch **Where To?** > **Points of Interest** > **Spell Name**.

To search in a different area, touch **Where To?** > **Near**.

Using the Go! Page



- 1 Touch to view the route on the map.
- 2 Touch to start navigating the route.
- 3 Touch to view this location and surrounding areas on the map.
- 4 Touch to save this location to your Favorites.

Using the Map Page

Your route is marked with a magenta line. As you travel, your zūmo guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. A checkered flag marks your destination. A checkered flag marks your destination. If you depart from the original route, your zūmo recalculates the route and provides new directions.



- 1 Touch to view the next turn (navigating on road).



- 2 Touch the text bar to view the turn list.



- 3 Touch to zoom in and out.

- 4 Touch the vehicle icon to view the Where Am I? page.



- 5 Touch to view the trip computer.



- 6 Touch to view the Menu page.

Taking a Detour

If the road ahead is closed, you can take a detour.

NOTE: Detour is not available when navigating off road.

1. With a route active, touch **Menu**.
2. Touch **Detour**.

The zūmo attempts to find an alternate route that avoids the current road or the next road on your turn list, and then returns to your original route. If the route you are currently navigating is the only reasonable option, the zūmo might not calculate a detour.

Adding a Stop to Your Route

1. With a route active, touch **Menu > Where To?**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as Via Point** to add this stop before your destination.
OR
Touch **Set as new Destination** to make this your new final destination.

TIP: To add more than one stop, edit the current route. Touch **Where To? > Custom Routes**.

Navigating Off Road

When you choose a destination while the off road feature is enabled, the zūmo plots a straight line to the destination.

1. Touch **Tools > Settings > Navigation**.
2. Under **Route Preference**, touch **Off Road**.



Pairing your Bluetooth® Headset

You can listen to zūmo audio with your Bluetooth headset. The first time you use two devices together, you must “pair” them. Your Bluetooth headset and the zūmo must be turned on and be within 10 meters of each other. After the initial pairing, the two devices can connect automatically each time you turn them on.

1. Touch **Tools > Settings > Bluetooth**.
2. Enable Bluetooth technology on your zūmo.
3. Under Connections, touch **Add or Change**.
4. Enable Find Me/Discoverable/Visible mode on your headset.

5. Touch **OK** on the zūmo.
6. Select your headset, and touch **OK**.
7. Enter the Bluetooth PIN for your headset, if necessary, and touch **Done**.
8. Touch **OK**.

Using TracBack®

Touch **Where To?** > **TracBack** to view your recent track. Touch **Save** to save the track to your Favorites. Touch **Go!** to retrace your recent path of travel.

Securing Your zūmo

1. Touch **Tools** > **Settings** > **Security** > **Garmin Lock**.
2. Enter a 4-digit PIN and drive to a security location.

NOTE: If you forget your PIN and your security location, you must send your zūmo to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

Product Registration

Help us better support you by completing our online registration today. Go to <http://my.garmin.com>. Keep the original sales receipt, or a photocopy, in a safe place.

Contact Garmin

Contact Garmin if you have any questions while using your zūmo. In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397-8200 or (800) 800-1020.

In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

More Information

For more information about your zūmo, touch **Tools** > **Help**. You can download the latest version of the owner's manual from www.garmin.com. For information about accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

Garmin®, the Garmin logo, zūmo®, and TracBack® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Lock™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. microSD™ is a trademark of the SD Card Association. Other trademarks and trade names are those of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounslow Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

www.garmin.com