

iQue® M5 Quick Reference Guide



To open the GPS antenna, press the antenna release down (on the back of the unit) and lift up the antenna so that it is parallel to the horizon.

Press the **Que** button to view other Que pages

Finding Places & Creating Routes

Once you load detailed maps to your iQue M5 (see the *Setup Guide*), you can search for addresses, restaurants, hotels, and many other Points of Interest. The iQue M5 calculates turn-by-turn directions to your destination.

To find a nearby restaurant and route to it:

1. From QueMap (the Map page), tap the **QueFind** icon
2. Tap the **Food & Drink** icon.
3. Tap the **Search By** drop-down menu and select **Near Current Location**.
3. Tap a restaurant you want to go to. Then tap **Route to It**.

Tap the **All** link to narrow your search. Search By



Tap the links at the top of the page to narrow your search.

To repeat directions:

Press and hold the **Que** button

To view route turns:

Press the **Que** button to view the QueTurns page.

To stop or restart a route:


From QueMap, tap the **QueRoutes** icon . Then tap **Stop Navigation** or **Resume Navigation**.



Adding Via Points (Extra Stops)

To add Via points (extra stops) to your route:

1. With an active route on QueMap, tap the **QueRoutes** icon . Then tap **Edit Vias**.
2. Tap **Menu** and then **Add from Map** or **Add from Find**. Then select a place to add to your route and tap **ok**.
3. Tap a Via point in the list and then tap the arrows to move the point up or down. Tap **Menu** and then **Determine Best Order** to let the iQue M5 determine the best order automatically. When you are finished, tap **ok** to recalculate your route.

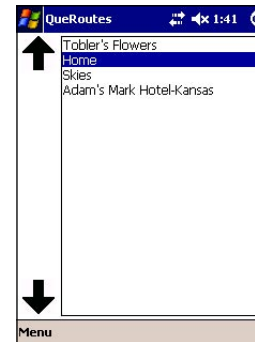

The Via points are listed in order from first to last in the route. Tap a point and then tap an arrow to move the point up or down in the list.


To find a place near an active route:

1. With an active route on QueMap, tap the **QueFind** icon
2. Select a category. Then tap the **Search By** drop-down menu on the search page and select **Near Current Route** or **Near Route Destination**.
3. Tap a point to select it. To add the point to your route, tap **Menu** and then **Add as Via Point**. Reorder the Via points as necessary and tap **OK**.

Detours/Saving Routes

To add a detour to an active route:

1. From QueMap, tap the **QueRoutes** icon . Then tap **Detour**.
2. Select a type of detour: **Distance** or **Turns**. Then select the number of miles or the turn you want to avoid.
3. Tap **OK**. The route recalculates automatically. To cancel the detour, tap the **QueRoutes** icon and then **Cancel Detour**.

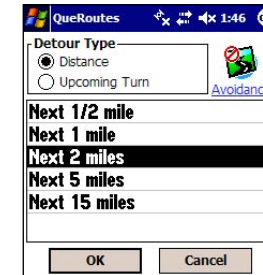


To save an active route:

1. With an active route on QueMap, tap the **QueRoutes** icon . Then tap **Save Current Route**.
2. Rename the route if you wish and tap **Save**.


To activate a saved route:

1. From QueMap, tap the **QueRoutes** icon . Then tap **Menu** and select **Saved Routes**.
2. Tap a route in the list of saved routes and tap **Activate**.

Navigating with QueMap

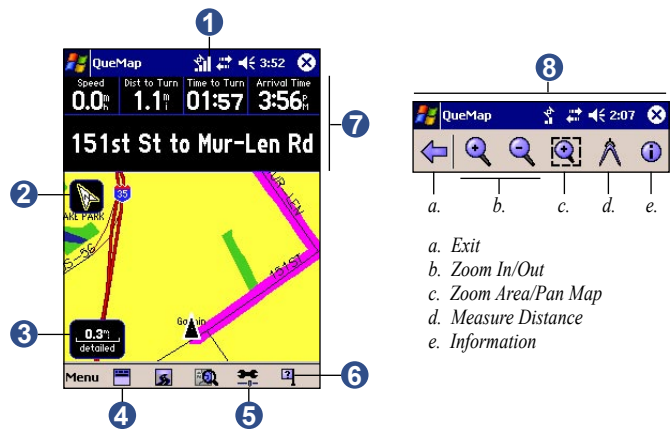

1. Tap the **System Status** icon to view GPS Satellite status.
2. Tap to change map orientation from **Track Up** (shown) to **North Up** (North is at the top of the map).
3. Tap **Zoom Scale** to zoom in or out.
4. Tap to **Show/Hide Data Fields**.
5. Tap the **Map Detail** icon to adjust how much map detail appears.
6. Tap the **Where Am I?** icon to view information about current position.
7. Tap and hold on **Data Fields** to customize how they appear.
8. Tap anywhere on the map to open the **Pan Toolbar**.

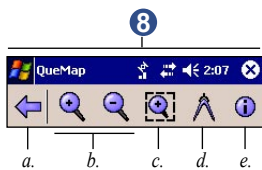



- a. Exit
- b. Zoom In/Out
- c. Zoom Area/Pan Map
- d. Measure Distance
- e. Information


Saving Locations

A Location is a point on the map that you store in memory. You can use Locations in routes or associate them with contacts and appointments. See the *Que Applications Guide* for more information.


To save a Location:

- Tap the **Where Am I?** icon  to save your current position as a Location.
- Tap anywhere on the map to activate the Pan Toolbar. Place the map pointer on the point you want to save as a Location. Then tap the **Information** icon  on the Pan Toolbar.
- Search for a point with QueFind. Tap and hold on the point you want to save as a Location and select **Add to My Locations**.

To find a Location:

From QueMap, tap the **QueFind** icon  and then tap **My Locations**. Search for a Location just as you would search for any other type of point. You can route to a Location or view it on QueMap.


To create a Location for a Contact or appointment:

1. Open **Contacts** or **Calendar** by tapping **Start**  or by pressing the **Calendar** or **Contacts** buttons on your iQue M5.
2. Tap and hold on the Contact or appointment you want to create a Location for. Select **Que** and then **Add to My Locations** or **Set Location Point**.
3. Select an address for the Location. To route to this Contact or appointment, tap and hold on the item, tap **Que**, and select **Route to It**.

Home Location

You can set a special Location called a Home Location, which can be your residence or a place you return to frequently.

To set a Home Location:

1. From QueMap, tap the **QueRoutes** icon . Then tap **Set Home Location**.
2. Tap **Set from Find** and then search for your home address, or tap **Set from Map** and find your home on the map. Then tap **ok**.
3. Tap **ok** again to save.



To change your Home Location:


1. From QueMap, tap **Menu** and then **QuePreferences**.
2. Tap the **Routing** tab. Then tap **Home**.
3. Change your Home Location as described in steps 2 and 3 above.


To route to Home:

From QueMap, tap the **QueRoutes** icon . Then tap **Route to Home**.


QueTrip/Changing Preferences

To use QueTrip:

1. Press the **Que** button  repeatedly until QueTrip appears.
2. From within QueTrip, tap **Reset Trip** to reset distance and time fields.
3. To reset other fields, tap **Menu** and then **Reset Odometer**, **Reset Max Speed Only**, or **Reset All**.

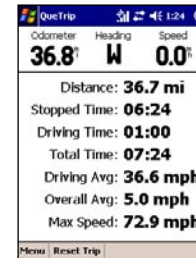

To adjust the backlight:

1. Tap the **System Status** icon  and then tap **Backlight**.
2. Adjust the brightness of the backlight. Make other changes as necessary and tap **ok**.



To change how routes are calculated:

1. From QueMap, tap **Menu** and then **QuePreferences**. Then tap the **Routing** tab.
2. Under **Route Preference**, select the method you want to use to calculate routes. Select **Custom** to choose your own road combinations or to calculate routes based on your driving habits.

To change map settings:

1. From QueMap, tap **Menu** and then **QuePreferences**.
2. Make adjustments to map settings as necessary. Tap **ok** to save.